



Do It Yourself Instructions for various hand shower mounts

Read all instructions prior to installation. Manufacturer assumes no responsibility due to improper installation.
Tools Required: Pliers, Teflon Tape® (not included)


Installing Hand Shower Mounts

Determine which style mount you have and follow those instructions.
Clean the threads on your shower arm. Recommended to wrap with Teflon® Tape to prevent leaks.
Never use pipe dope or plumber's putty.

Shower Arm Pin Mount

Insert the gasket (provided) into the nut; screw clockwise onto the exposed shower arm threads until tight. Do not overtighten.


The mounting pin must be pointed straight up when finished.

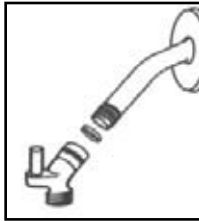

Shower Arm Mount

Insert the gasket (provided) into the nut; hand tighten clockwise onto the exposed shower arm threads until tight. Do not overtighten. Do not use a wrench or pliers.

The mount must be in the upward position at final installation.

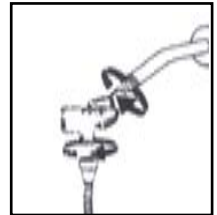

Pin Wall Mount

Select wall position desired for your hose length. Prior to mounting, hold the mount in the upward position with the pin pointing upward. Determine type of mount application.

For mounting into Tile: Drill 1/4" holes in grout (if possible) and use enclosed anchors and screws to mount.



For mounting into Fiberglass/Acrylic: Drill 1/4" holes (larger if needed for specific toggle bolts) in wall and install with small toggle bolts (not supplied).

For Adhesive Mounting:

Lightly clean the surface with extra-fine steel wool; then apply rubbing alcohol or fingernail polish remover to prepare the surface, wipe clean.

Caution: the first position must be correct, as you cannot move the mount after adhering to the surface. Peel off the green backing film and position holder upright. Press firmly into place.

ALLOW 24 HOURS BEFORE USING.

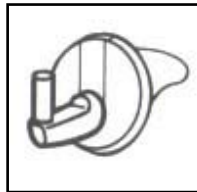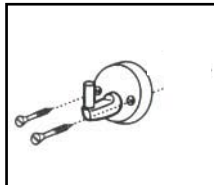

Wall Mount

Select wall position desired for your hose length. Prior to mounting, hold the mount in the upward position. Determine type of mount application.

For mounting into Tile: Drill 1/4" holes in grout (if possible) and use enclosed anchors and screws to mount base.

For mounting into Fiberglass/Acrylic: Drill 1/4" holes (larger if needed for specific toggle bolts) in wall and install with small toggle bolts (not supplied).

For Adhesive Mounting:

Lightly clean the surface with extra-fine steel wool; then apply rubbing alcohol or fingernail polish remover to prepare the surface, wipe clean.

Caution: the first position must be correct, as you cannot move the mount after adhering to the surface. Peel off the green backing film and position holder upright. Press firmly into place.

ALLOW 24 HOURS BEFORE USING. Snap shell cover over the base on the wall.

