





# Water Amplifying Shower Head Installation Instructions

Tools needed Wrench (to remove old shower head) and Teflon<sup>®</sup> tape


- 1 Remove old shower head from shower arm.

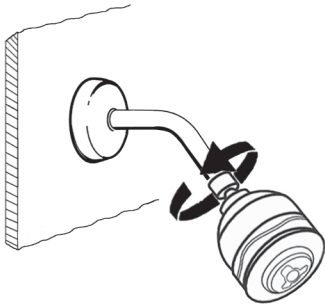

- 2 Remove any excess materials left on the threads of the shower arm and wrap Teflon<sup>®</sup> tape around the threads.

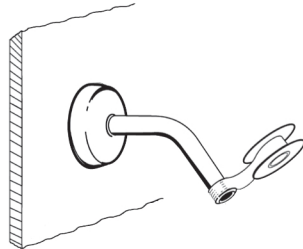

- 3 Hand tighten the new shower head to the shower arm by turning clock wise. Turn on the water and check the system for leaks.

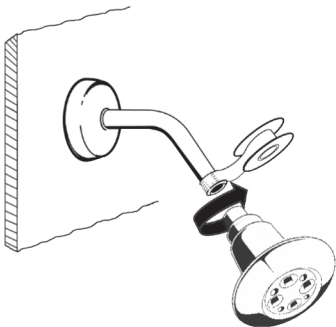

Caution: Use of cleaners or other chemicals not specifically recommended for plastic or ABS may result in damage to shower products.